GB Fitting Instructions for Basic Carrier

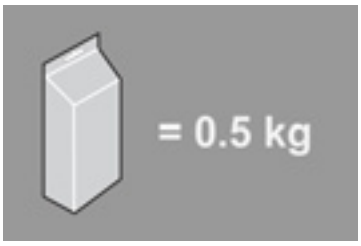

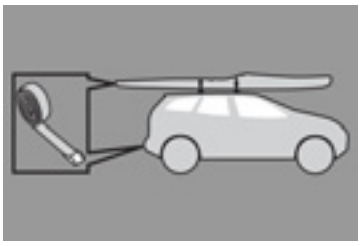

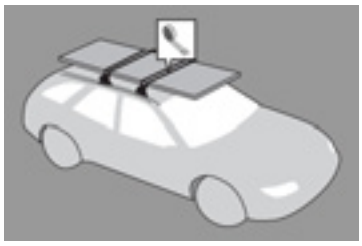

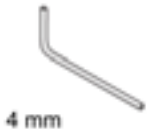

x 1

x 2

x 2

x 1

x 1

First Time Installation

- Remove parts from packaging and check contents. Contact your Prorack dealer if parts are missing or damaged.

- This kit fits type A, B, C and D.
- These instructions show type A crossbar fitted. They also apply to type B, C and D.

NOTE: Clamp images in these instructions may not be representative of the clamps in this kit

- Use keys to remove covers.

- Use hex screwdriver to reverse adjusting screw 10 turns.

- Press adjusting screw and pull crossbar legs out. Refer to the crossbar instructions for crossbar adjustment.
- Ensure each end of the crossbar is adjusted equally.

- Remove locking screw.

- Attach clamp to each leg. NOTE; clamps may have labels showing their positions on the vehicle (For example; "Front Right").
- It is important to put the clamps in the correct position on the vehicle.
- Clamp positions below:

	Left	Right
Front	442	443
Rear	442	444

- Refit locking screw so that it goes through the hole in the clamp. Do not begin to tighten the locking screw.

- Fit pad to feet.

- Make sure the pad fits into the holes underneath the foot.

Fitment

- Note: The righthand clamps hook onto the body clip under the righthand window first. Then lefthand clamps screw into the cavity nuts in the roof line.
- Line up the hole in the clamp with the fixed point in the roof.
- Using the Allen Key and the capscrews, secure the clamps to the vehicle.

- Adjust the legs on the crossbar so that they are positioned equally from the ends of the crossbar, and the clamps engage firmly on the body work of the vehicle.

- Tighten adjusting screw to 5 Nm.

- Tighten locking screw on both legs evenly.

- Check crossbar is securely attached to the vehicle.

- Use keys to fit and lock covers

CAUTION: Regularly check screws are tight